

Replacement parts for Flow®

Wonderful Hard Parts



PASER ECL cutting heads

Assemblies

Description	PASER ECL cutting head assy
Picture	Right
Miaoke #	DTF100-A
Replaces	014192-1



Replacement parts

Mixing Chamber



DTF111
014197-1

DWJ Nozzle Body Nut



DTF121
711589-1

Abrasive Inlet



DTF131
—

Precision Collet, 9/32 ID



DTF141
710806-1

DWJ Spray Shield Yellow



DTF151
711621-1

DWJ Blast Disk, 38.75mmOD



DTF161
711933-1

Mixing Tube Space



DTF171
712265-1

Replacement parts for Flow®

Cutting Heads

PASER 4 cutting heads

Assemblies

Description	PASER 4 cutting head assembly
Picture	Right
Miaoke #	DTF100-B
Replaces	041136-1



Replacement parts

Mixing Chamber



DTF112
041138-1

DWJ Nozzle Body Nut



DTF121
711589-1

Abrasive Inlet



DTF131
—

Precision Collet, 9/32 ID



DTF141
710806-1

DWJ Spray Shield Yellow



DTF151
711621-1

DWJ Blast Disk, 38.75mmOD



DTF161
711933-1

Mixing Tube Space



DTF171
712265-1

PASER 3 cutting heads

Assemblies

Description	PASER 3 cutting head assembly
Picture	Right
Miaoke #	DTF100-C
Replaces	—



Replacement parts

Mixing Chamber, Single-inlet, 60K



DTF113
—

Nozzle Nut



DTF122
009939-1

Abrasive Inlet



DTF131
—

Retainer Collet (copper)



DTF142
—

Shield; Spray



DTF152
—

Replacement parts for Flow®

On/off Valves

On/off Valves

Assemblies

Description	On/off valve assembly
Picture	Right
Miaoke #	DTF200-A
Replaces	—



Replacement parts

On/off Valve Actuator Accembly



DTF211
—

On/off Valve Body



DTF221
006143-1

On/off Valve HP Collar



DTF231
—

Nozzle Body



DTF241
—

Retainer Cap



DTF251
001112-1

On/off Valves

Assemblies

Description	On/off valve assembly
Picture	Right
Miaoke #	DTF200-B
Replaces	—



Replacement parts

On/off Valve Actuator Assembly



DTF211
—

On/off Valve Body



DTF222
010104-1

On/off Valve HP Collar



DTF231
—

Nozzle Body



DTF242
014196-1

Retainer Cap



DTF252
—

Replacement parts for Flow®

On/off Valves

On/off Valves

Assemblies

Description	Cutting head assembly
Picture	Right
Miaoke #	DTF200-C
Replaces	—



Replacement parts

On/off Valve Actuator Assembly



DTF211
—

On/off Valve Body



DTF222
010104-1

On/off Valve HP Collar



DTF231
—

Nozzle Body, 5.49"



DTF243
006145-1

Nozzle Retainer, Low Mass



DTF253
006146-1

Repair kits

Assemblies

Description	On/off valve repair kit
Picture	Right
Miaoke #	WXF100-A
Replaces	001959-1



Replacement parts

Nozzle Poppet Stem



WXF101
006934-1

Valve Seal



WXF102
001328-1

Bronze Backup Ring



WXF103
001337-1

Seat Poppet



WXF104
006933-1

O-ring, -014



WXF105
A-0275-014

Wooden Stick



WXF106
—

Replacement parts for Flow[®]

On/off Valves

Repair kits

Assemblies

Description	On/off valve repair kit
Picture	Right
Miaoke #	WXF100-B
Replaces	010200-1



Replacement parts

Nozzle Poppet Stem



WXF107
010105-1

Valve Seal



WXF108
003831-1

Bronze Backup Ring




WXF109
003832-1

Bushing Stem



WXF110
003838-1

 On/off Valve Poppet Seat

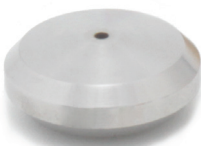

WXF104
006933-1

O-ring, -014



WXF105
A-0275-014

Wooden Stick



WXF111
—

Repair kits

Assemblies

Description	Universal on/off valve seal kit
Picture	Right
Miaoke #	WXF100-D
Replaces	014988-1



Replacement parts

On/off Valve Poppet Seat



WXF112
014558-1

O-ring, -014



WXF105
A-0275-014

On/off Valve Backup Ring



WXF113
014555-1

O-ring



WXF114
B-8075-005

On/off Valve Seal



WXF115
—

On/off Valve Needle Poppet




WXF116
014557-1

Replacement parts for Flow®

Pump Parts

Replacement parts

 
Intensifier Assembly

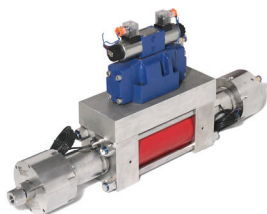

ZYF001

—

 Intensifier Assembly

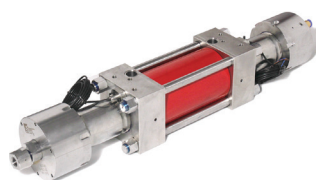

ZYF002

—

Attenuator



ZYF003

—

HyLoad Hydraulic Piston



ZYF004-A


—

Intensifier Piston



ZYF004-B
007026-1

 Biscuit Spacer

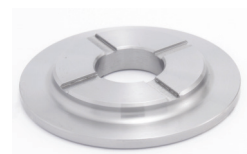

ZYF005
007029-1

Piston Snap Ring



ZYF006

—

Piston Seal Kit



ZYF700


—

Low Pressure Cylinder



ZYF007
C-1000-1

 End Bell Assembly

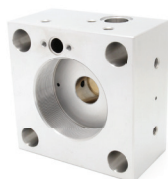


ZYF008-L
007303-1

End Bell Assembly



ZYF008-R
007303-2

 
HP Cylinder

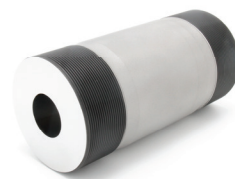

ZYF009B
007038-3

Replacement parts

 High-pressure Cylinder

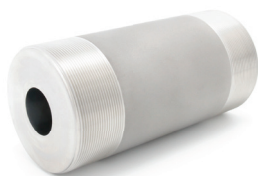

ZYF009
007038-3

HP End Cap



ZYF010
321276-1

HP Plunger Assembly



ZYF011
—

LP Cylinder Tie Rod Assembly



ZYF012
—

Check Valve Body



ZYF013
004383-3

Check Valve Outlet Body Adapter



ZYF014
C-1313-1

Backup Seal Sleeve



ZYF015
B-1002-2

HP Seal Kit




ZYF800
001198-1

Intensifier Seal Ring



ZYF801
B-1465-1

 Grease

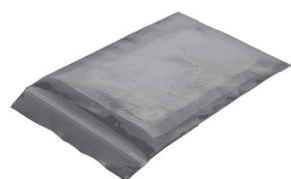

ZYF802
—

HP Seal Kit



ZYF803-MB
—

HP Seal Kit



ZYF803-HY
—

Replacement parts for Flow®

Pump Parts

Replacement parts

HP Seal Kit



ZYF803-HG

—

Outlet Poppet



ZYF016

—

Poppet/Seat Assembly



ZYF017

—

Reversing Bracket



ZYF018

—

Electric Shift Actuator Assembly



ZYF019

B-8346-1

Shift Spring



ZYF020

—

Spacer Oil Seal Assembly



ZYF021Z

—

HP Mechanical Shift Actuator Pin



ZYF022

002226-1

Electric Shift Proximity Sensor Assy, 24V



ZYF023

011275-1

Cable Assembly



ZYF024

—

Cable Assembly



ZYF025

—

Cable Assembly



ZYF026

—

Replacement parts

High Pressure Cylinder



ZYF027
013387-1

Direct Drive Check Valve Body




ZYF028
013383-1

End Cap Assembly




ZYF029
011044-1

 1/4 in. 90° Single Axis Swivel Assembly

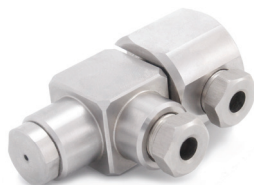

ZYF030
C-5155-1

 1/4 in. 90° Dual Axis Swivel Assembly

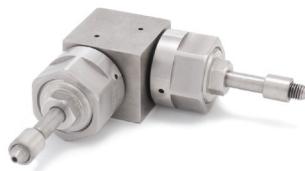

ZYF031
—

Ceramic Plunger



ZYF032
011045-1

Direct Drive Maintenance Kit



WXF200D-A
013108-1

Swivel Shaft Spares Kit



WXF200D-B
—

Direct Drive Seal Carrier Assembly



ZTF033
044099-1

Shift Valve Solenoid (with pilot valve)



ZYF034
A-18862

Solenoid Valve



ZYF035
—

Replacement parts for Flow®

Pump Parts

Seal kits

Assemblies

Description	Low Pressure Seal Kit-ESL
Picture	Right
Miaoke #	ZYF600
Replaces	010641-1



Replacement parts

Back-up Ring



ZYF60Z

—

Seal; U-cup



92.08*101.6*4.76mm

ZYF603

—

O-ring



ZYF606/7/8/9/10/11

—

Seal; T-seal




22.23*128.58*6.35mm

ZYF61Z

014899-1

 Spring Energized Rod Seal

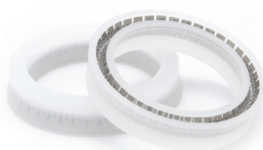

ZYF602

—

Repair kits

Assemblies

Description	Bleed-down valve repair kit (60k)
Picture	Right
Miaoke #	WXF200-A
Replaces	004694-1



Replacement parts

Valve High-pressure Seat



WXF201
B-5703-1

Valve Stem Bushing



WXF202
—

Valve Seal



WXF203
B-5701-2

Valve Piston



WXF204
—

O-ring



WXF205
—

Backup Ring, -114



WXF206
—

Bleed-down Valve Stem



WXF207
B-5702-1

Bleed-down Valve Seal Hoop



WXF208
B-5723-1

Bleed-down Valve Oil Seal



WXF209
A-4241

Replacement parts for Flow®

Pump Parts

Repair kits

Assemblies

Description	Check valve repair kit
Picture	Right
Miaoke #	WXF200-B
Replaces	015866-1



Replacement parts

Inlet Poppet Housing



WXF210
010564-1

Check Valve Inlet Poppet



WXF211
015384-1

Check Valve Retaining Screw



WXF212
004380-1

Check Valve Insert



WXF213
004382-1

Check Valve Outlet Poppet



WXF214
005917-1

Check Valve Compression Spring



WXF215
A-1606

Check Valve O-ring



WXF216
—