


Replacement parts for Jet Edge™
Wonderful Hard Parts

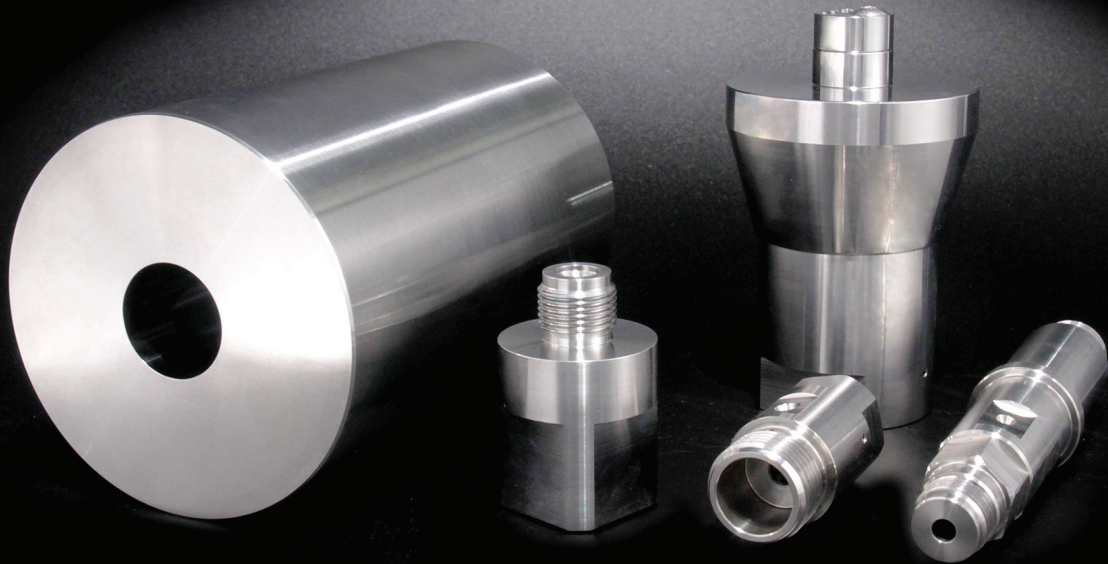

Replacement parts for Jet Edge™ Cutting Heads

Cutting heads

Assemblies

| | |
|-------------|-----------------------|
| Description | Cutting Head Assembly |
| Picture | Right |
| Miaoke # | DTJ200-A |
| Replaces | — |



Replacement parts

Air Actuator



DTJ211

—

On/off Valve Body



DTJ221

46627

Nozzle Body



DTJ241

—

Cutting Head Body



DTJ111

—

Magnet Nut



DTJ121

—

Abrasive Inlet



DTJ131

—


Seat



WXJ101

32826

Needle; Seal

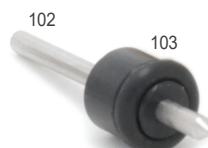

WXJ102; WXJ103

101843; 37135

Needle-Bearing



WXJ104

37136

Replacement parts for Jet Edge™

On/off Valves

Repair kits

Assemblies

| | |
|-------------|-------------------------------|
| Description | Check Valve Repair Kit 0.875" |
| Picture | Right |
| Miaoke # | WXJ100-A |
| Replaces | — |



Replacement parts

Poppet Housing



WXJ101
105021

Low Pressure Poppet



WXJ102
104047

Check Tube Screw



WXJ103
104431

HP Poppet



WXJ104
35662

HP Seat



WXJ105
35367

HP Poppet Spring



WXJ106
25648

Replacement parts for Jet Edge™

Pump Parts & Repair Kits

Replacement parts

HP Cylinder



ZYJ001

—

Check Tube .875"



ZYJ002

104877

Consumable Backup Disk



ZYJ003

—

Hydraulic Rod Seal



ZYJ004

25945

Check Valve Adapter



ZYJ005

35697

Wear Ring, Piston Seal



ZYJ700

—

HP Seal Kit



ZYJ803-MB

—

Ceramic Plunger



ZYJ006

—